



## JEEP JT GLADIATOR

PRODUCTION DATE: 2019 ONWARDS

### FITTING INSTRUCTIONS FOR:

ACCESSORY PART NUMBER: K703037RP-KIT

REAR RECOVERY POINTS



### ⚠ CAUTION

Ensure correct tools & appropriate PPE are used whilst installing this accessory

### CARE INSTRUCTIONS

Wash with regular car wash products.  
Regularly check bolt torque settings.

### INSTALLATION TIME

Approximately 15 minutes  
(guide only).


# KIT CONTENTS

## 1 FITTING INSTRUCTION




x1

## 2 RECOVERY HOOK

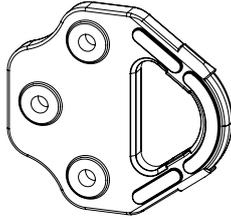

x2

## 3 WASHER PLATE

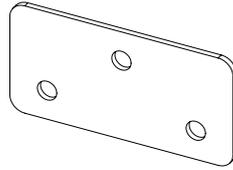


x2

## 4 SPACER TUBE



x6

## 9 BOLT KIT

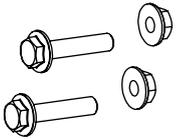

REFER PARTS LIST


x1

 CHECK THAT THE CONTENTS OF THE REAR BAR KIT ARE COMPLETE & UNDAMAGED PRIOR TO FITMENT.

 IF ANY CONTENTS OF THE REAR BAR KIT ARE INCOMPLETE OR DAMAGED THEY MUST BE REPLACED USING SPECIFIED ACCESSORY COMPONENTS.

# TOOLS REQUIRED

## 1 Metric sockets & spanners

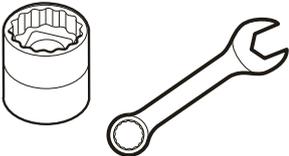

## 2 Torque wrench



# REAR RECOVERY POINTS ASSEMBLY

## CAUTION

SIDE RECOVERY POINTS MUST BE USED IN TANDEM WITH A BRIDAL / EQUALISER STRAP


## RATED CAPACITY

INDIVIDUAL LOADING MUST NOT EXCEED 4000 kg

## PARTS LIST

Check contents of kit before commencing & report any discrepancies.

ITEM NO.	DESCRIPTION	QTY.
1	FORGED SIDE RECOVERY HOOK	2
2	WASHER PLATE	2
3	SPACER TUBE 72MM 21.3 X 3.2	6
4	BOLT HEX HD M12 X 120 X 1.25P G10.9	6
5	NUT HEX HD M12 X 1.25P G8	6
6	WASHER PLAIN 1/2"	12

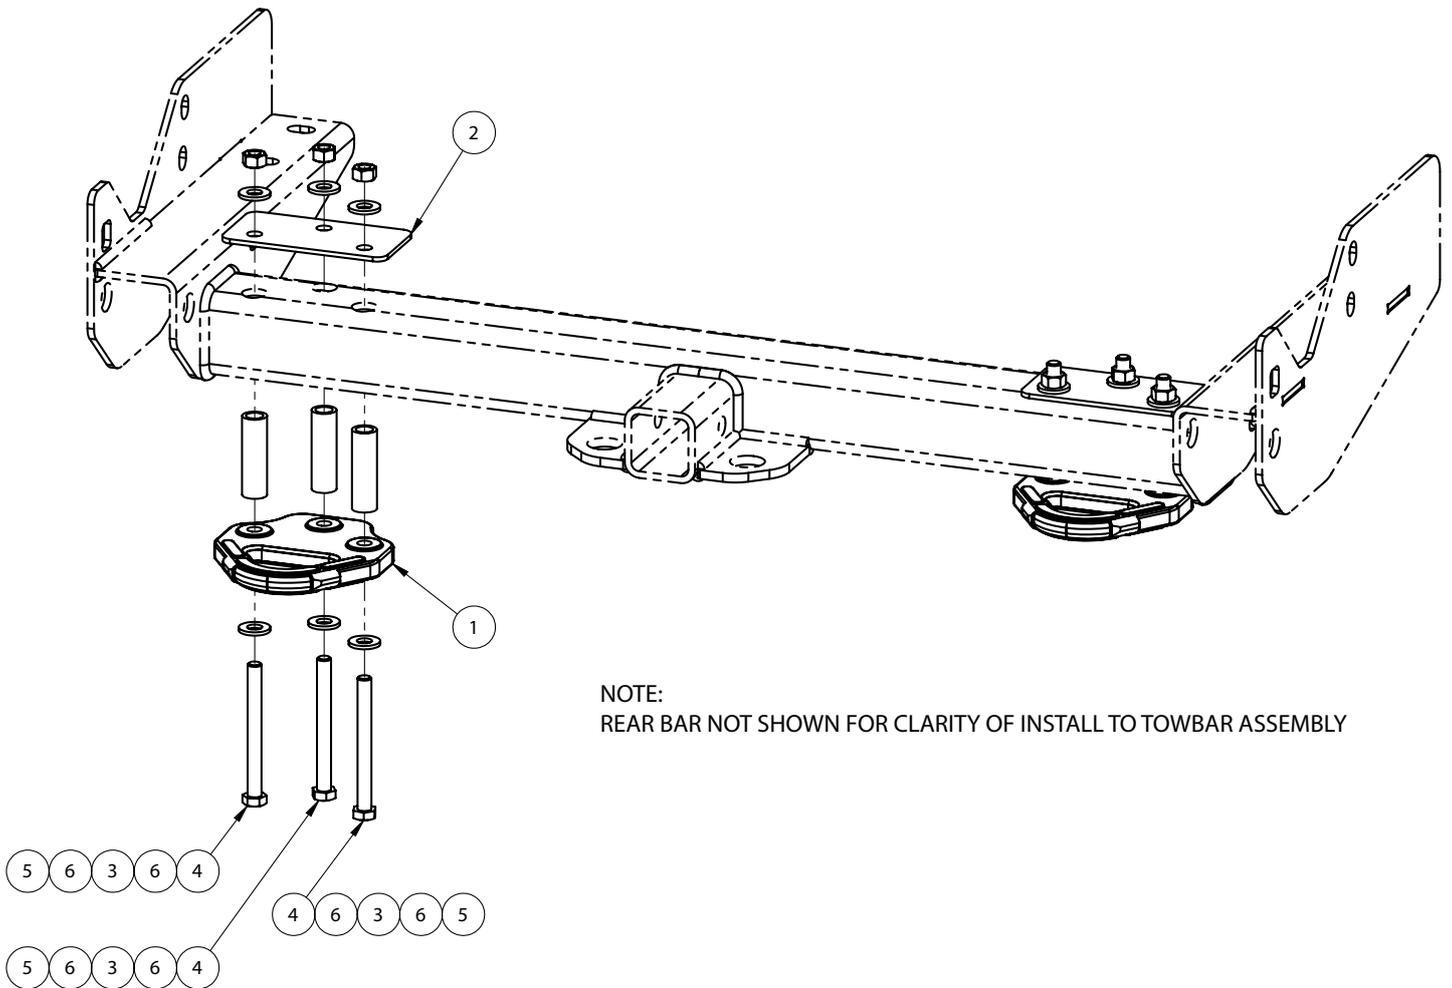

NOTE:  
REAR BAR NOT SHOWN FOR CLARITY OF INSTALL TO TOWBAR ASSEMBLY

1.

Assemble 3x M12x120 Bolts (Item 4) 3x M12 washers (Item 6) and 3x spacer tubes (Item 3) as shown.



2.

Insert the bolts & spacer tubes into the cross tube as shown while holding the bolts so they don't fall out.



3.

Assemble the washer plate on top of the cross tube over the bolts & attach using 3x M12 Nuts (Item 5) & 3x M12 Washers (Item 6) Repeat process for the other side.

Note:

M12 10.9 Torque Spec - 125Nm (92 ft-lb)

