

Kaymar

Fitting Instructions



Suitable for
Toyota 62 Series LC

Year

Type Wagon

Part Rear Bar

Applicable to Part Numbers

K1340, KIT62, KIT62-L-JCD, KIT62-R-JCD

Date published November 28, 2017

IMPORTANT - BEFORE COMMENCING INSTALLATION

Please verify the part number corresponds with the list above.

Read through these instructions and check items in the supplied fitting kit matches the attached list.

Every effort is made to ensure instructions are as accurate as possible at the time of publishing however work should not be commenced until the document has been thoroughly read, measurements checked and all components in the package verified as complete. Kaymar has used reasonable care in preparing the information included in these documents, but makes no representations or warranties as to the completeness or accuracy of the information. Information is supplied upon the condition that the persons receiving the information will make their own determination as to its suitability for their purposes prior to use. Kaymar assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein. Kaymar reserves the right to make changes without further notice to any products to improve reliability, function or design.

Suitable for 62 SERIES LC


1. Remove existing bumper and towbar.
2. The three rivets on each chassis rail holding the existing bumper bracket must be removed and the holes drilled out to 1/2 " diameter.
3. Lift the new rear bar onto the chassis and fit all nuts and bolts. **DO NOT TIGHTEN** any bolts until they are all fitted.
N.B. It may be necessary to use a lever bar in some holes to align other holes.
4. The large square washers are to be fitted to the bolts in the centre section of the bar.
5. Once all bolts are fitted check that the bar is sitting straight and square on the car, and tighten all bolts.
6. Fit the chequer plate top with the coach bolts supplied.

Kaymar

Fitting Instructions


BK1340 62 SERIES REAR BAR

QUANTITY	DESCRIPTION
6	PACKER 5MM 50 X 50
14	BOLT M12 X 35 X 1.75
14	NUT M12 X 1.75
14	WASHER SPRING M12
28	WASHER FLAT M12 X 30 HD

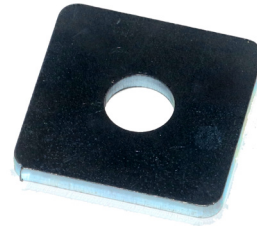

packer_5mm_50x50

BK1340 62 SERIES REAR BAR

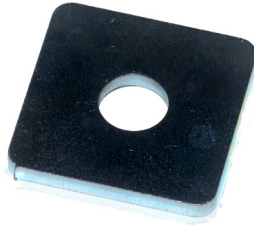

packer_5mm_50x50