


## AUXILIARY LIGHT FITTING SHEET

To be done while bumperette is off vehicle.

1. Remove LED lens from black plastic housing.

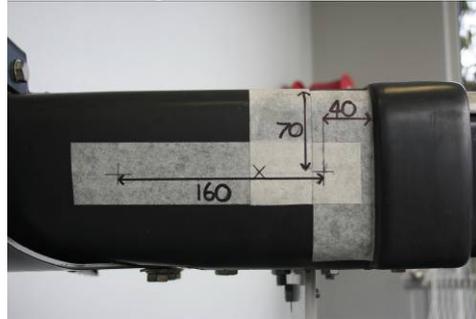

2. Mark bumperette as per photo. Drill two outer holes to 6mm and hole for wiring to 10mm. About 50mm in from screw holes.

3. Fit black plastic housing to bumperette, using M5 screw plus M5 whizz nut supplied.



4. Feed wiring through 10mm hole. Clip LED lens back into housing.
5. Fit terminals and connect to wiring harness.
6. Repeat other side. This can be done while bumperette is still on vehicle.