


TOYOTA LC300

PRODUCTION DATE: OCTOBER 2021 ONWARDS

FITTING INSTRUCTIONS FOR:

ACCESSORY PART NUMBER: K0320, K0330, K0320NP & K0330NP

WHEEL CARRIER LOCK PLATE

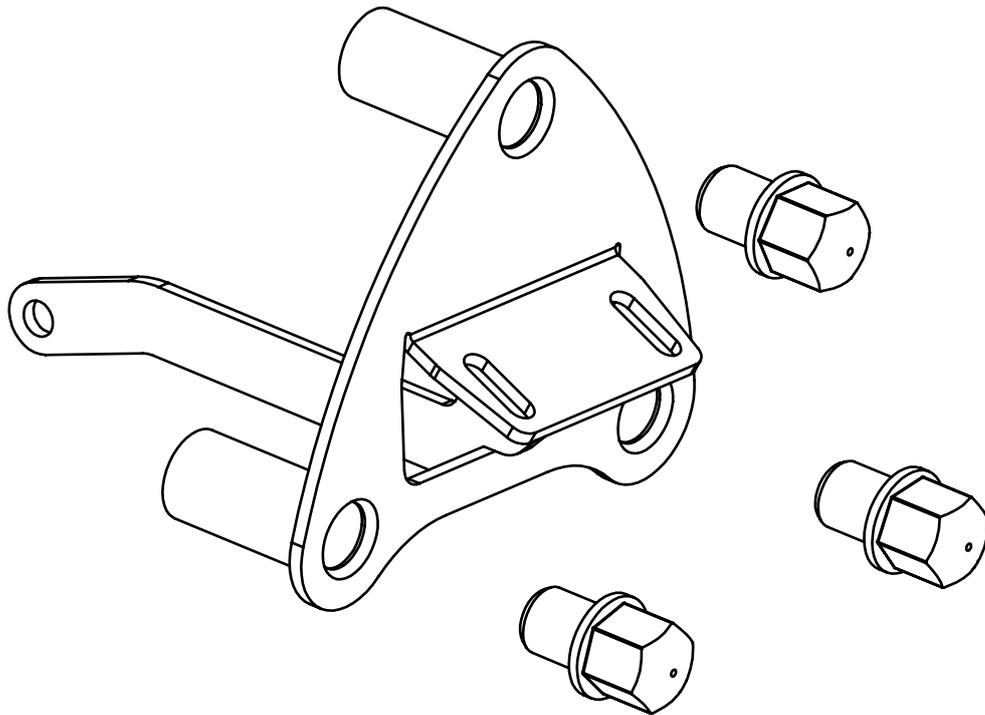

NOTE: This instruction is for multiple kits, your kit contents may not look identical to the above

CAUTION

Ensure correct tools & appropriate PPE are used whilst installing this accessory

CARE INSTRUCTIONS




Wash with regular car wash products. Regularly check bolt torque settings.

INSTALLATION TIME








Approximately 10-20 minutes (guide only).

KIT CONTENTS

COMPONENTS INCLUDED IN ALL KITS:

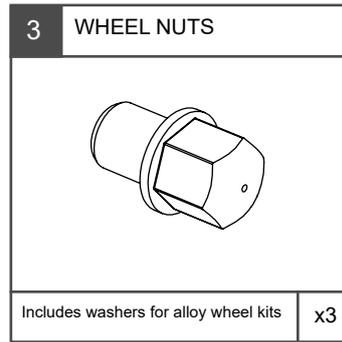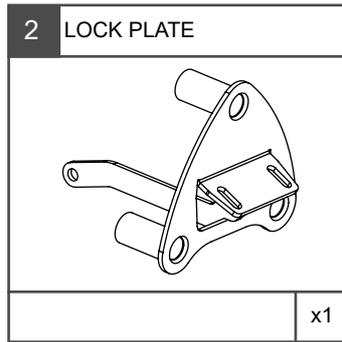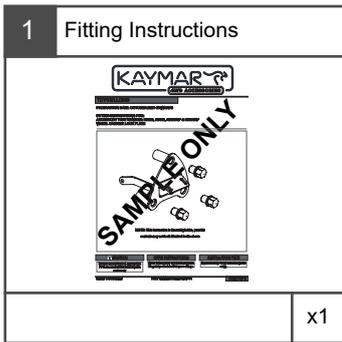

ADDITION COMPONENTS FOR KITS K0320NP & K0330NP

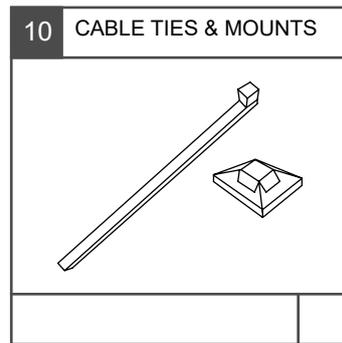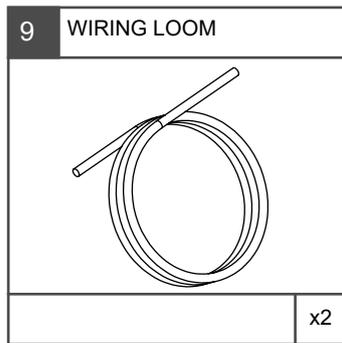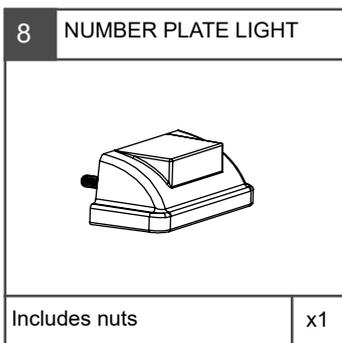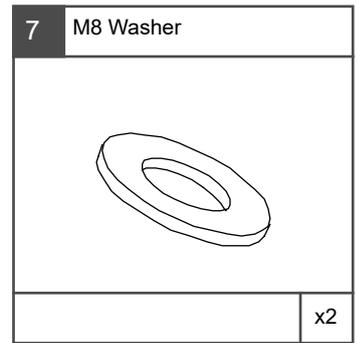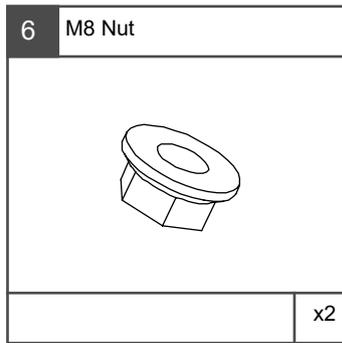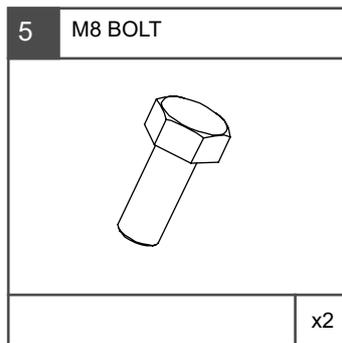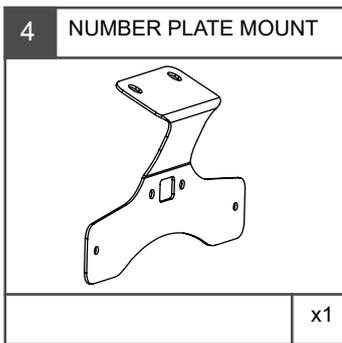


 CHECK THAT THE CONTENTS OF THE KIT ARE COMPLETE & UNDAMAGED PRIOR TO FITMENT.

 IF ANY CONTENTS OF THE KIT ARE INCOMPLETE OR DAMAGED THEY MUST BE REPLACED USING SPECIFIED ACCESSORY COMPONENTS.

STEP 1

- Install your wheel carrier to the swing arm per the rear bar fitting instructions.
- Insert the top slide and loosely assemble with the fasteners included in the wheel carrier kit.


NOTE: Ensure the bent tabs of the washer are orientated correctly as shown

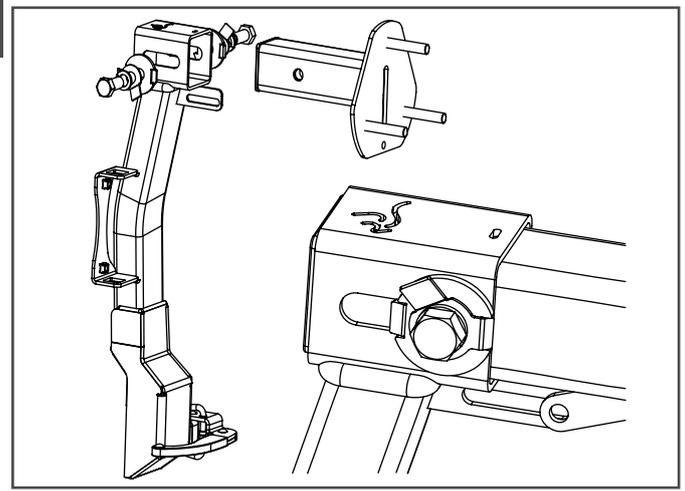

STEP 2


- Install your spare wheel onto the top slide studs and secure in place with the lock plate & supplied wheel nuts/washers.
- Tighten wheel nuts to 100Nm.

NOTE: Alloy wheel variant with number plate mount shown

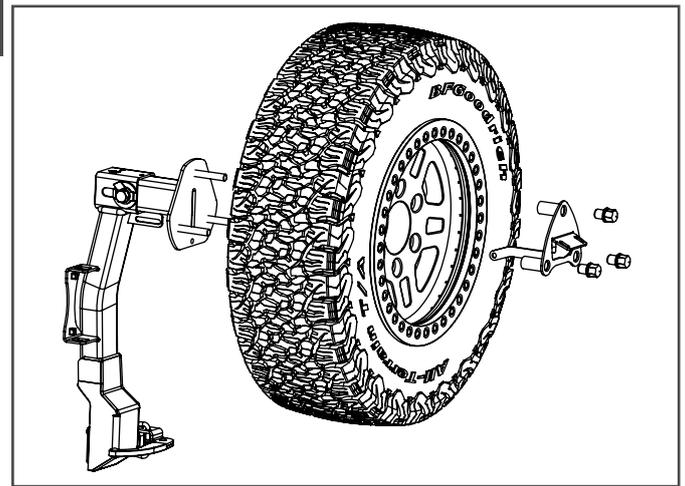

STEP 3

- Push the spare wheel & top slide back so that the tyre is hard against the lower part of the wheel carrier.
- We recommend setting the wheel with a slight incline so that the top of the tyre is closer to the vehicle.
- Once the correct position is achieved, tighten the top slide bolts to 140Nm & bend the locking tabs over.

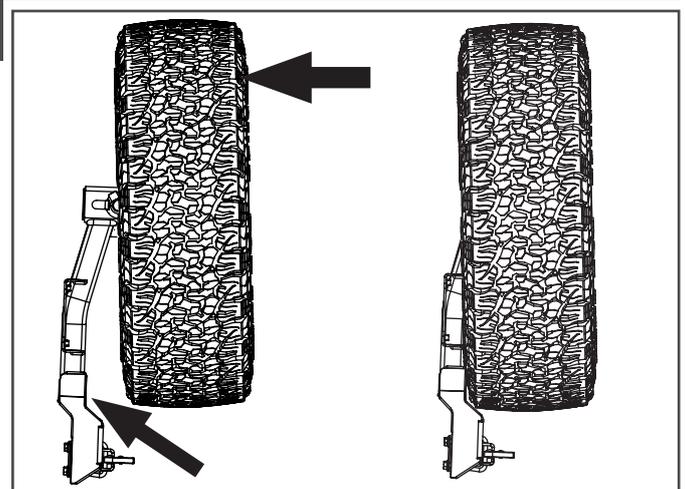

STEP 4

- If you have chosen a lock plate kit that includes a number plate mount, install the number plate mount as shown.
- Install the number plate light as shown and route the wiring as shown in the rear bar fitting instructions.
- Install your number plate.

