

Kaymar

Fitting Instructions



Suitable for
LandCruiser 100

Year

Type

Part **Auxiliary Light**
(with STD Carrier)

Applicable to Part Numbers

K1158

For use with:

K1120, K1120A, K1150, K1160

Date published November 28, 2017

IMPORTANT - BEFORE COMMENCING INSTALLATION

Please verify the part number corresponds with the list above.

Read through these instructions and check items in the supplied fitting kit matches the attached list.

Every effort is made to ensure instructions are as accurate as possible at the time of publishing however work should not be commenced until the document has been thoroughly read, measurements checked and all components in the package verified as complete. Kaymar has used reasonable care in preparing the information included in these documents, but makes no representations or warranties as to the completeness or accuracy of the information. Information is supplied upon the condition that the persons receiving the information will make their own determination as to its suitability for their purposes prior to use. Kaymar assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein. Kaymar reserves the right to make changes without further notice to any products to improve reliability, function or design.

AUXILIARY LIGHT FITTING

Suitable for LandCruiser 100 Series when fitting a Kaymar Standard Carrier

Kaymar


Fitting Instructions



AUXILIARY LIGHT FITTING SHEET

To be done while bumper is off vehicle.

1. Remove LED lens from black plastic housing.

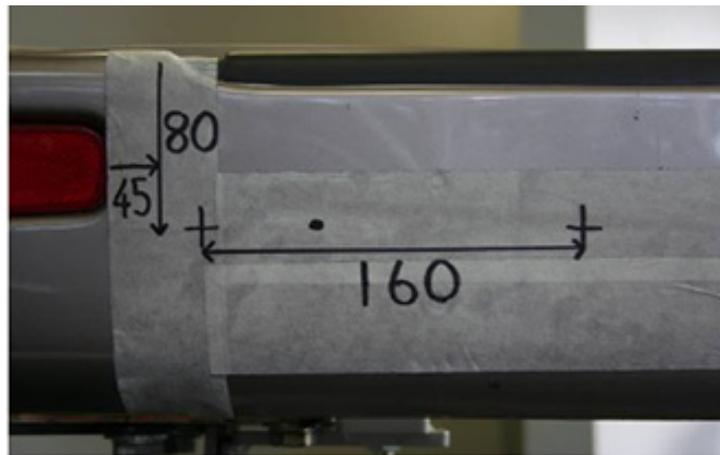

2. Mark bumper as per photo. Drill two outer holes to 6mm and hole for wiring to 10mm. About 50mm in from screw holes.
3. Fit black plastic housing to bumper, using M5 screw plus M5 whizz nut supplied.



4. Feed wiring through 10mm hole. Clip LED lens back into housing.
5. Fit terminals and connect to wiring harness.
6. Repeat other side.